

EM304R

Multi Input/output module and conventional line interface

The module is connected directly to Loop and provide up to 4 input and 4 output according to model (refer to table). In the versions with 4 inputs 2 of them can be configured as conventional line interface powered from loop or from a local power supply. The 4 outputs, according to model, can be supervised for sounder control or voltage free contacts.



Model	Inputs (selectable as conventional zone)	Outputs
EM344S	4 (2)	4 (supervised)
EM344R	4 (2)	4 (voltage free)
EM340	4 (2)	//
EM304S	//	4 (supervised)
EM304R	//	4 (voltage free)